



# DNH<sup>AS</sup>

**N-3770 Kragerø  
NORWAY**  
 Phone: ..... (47) 35 98 56 00  
 Fax: ..... (47) 35 98 56 10  
 E-mail: ..... dnh@dnh.no  
 Web-site: ..... [www.dnh.no](http://www.dnh.no)

 
 
**DNH WW Ltd.  
England**  
 Phone:.....(44) 1908 275 000  
 Fax:.....(44) 1908 275 100  
 E-mail:.....dnh@dnh.co.uk

**DNH GmbH  
Germany**  
 Phone:.....(49) 040 6569 30-0  
 Fax:.....(49) 040 6569 30-30  
 E-mail:.....dnh@dnh.de

**DNH  
Speakers Inc.  
USA**  
 Phone:.....(1) 484 494 5790  
 Fax:.....(1) 484 494 5793  
 E-mail:.....dnh@dnhspeakers.com

ISO 9001 CERTIFIED


## HP-6 C(T)

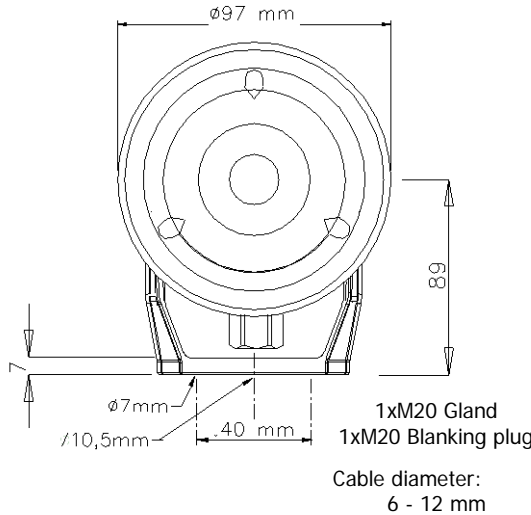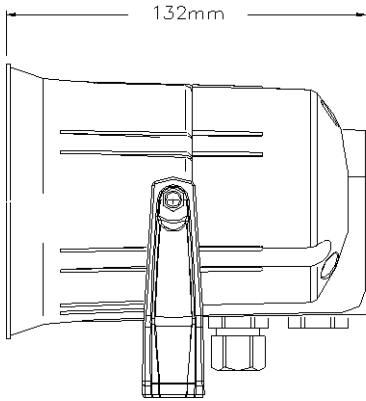

Transformer : Combined  
 70 / 100 Volt line  
 (White) : (Green) 70V  
 (White) : (Red) 100V

Secondary nominal tapings:  
 C : 6 6W  
 C : 3 3W  
 C : 1,5 1,5W  
 C : 0,5 0,5 W

 All outside nuts and screws in stainless steel.

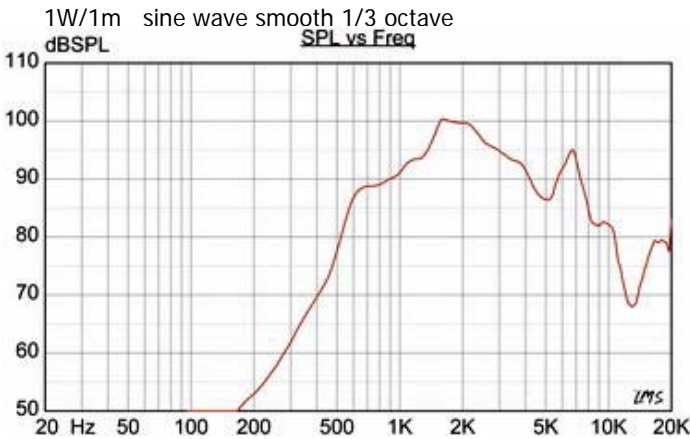

### Installation, Operation and Maintenance Procedures

- Remove lid to connect to terminal
- Fasten bracket with 2 screws.
- To change the position of the loudspeaker, please adjust the bracket (by loosening / tightening the screws) as required.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Fasten lid with a torque of 1 - 2 Nm
- This loudspeaker is supplied with a 2 year warranty against defective materials and workmanship.